




1. Unscrew lock nut and flat washer from fill valve.

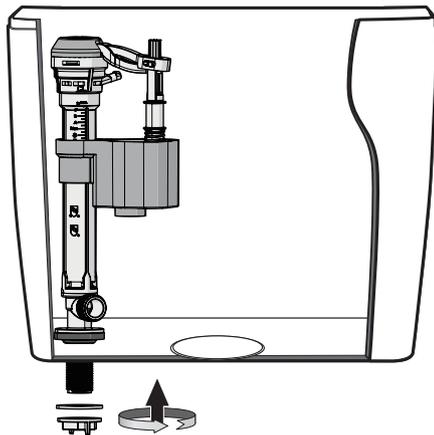


2. Position the fill valve with rubber gasket into the inlet hole of water tank and screw the lock nut with collar tightly. Caution!!! Do not over tighten the nut.

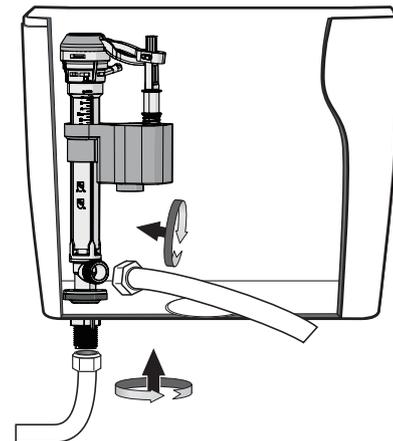

3. Install the water pipe on the fill valve.

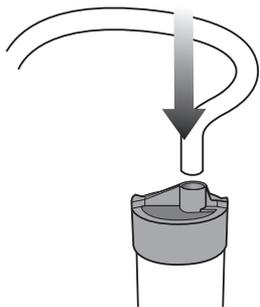

4. Attach one end of the refill tube to the overflow pipe, and the other to nipple located near top of valve.

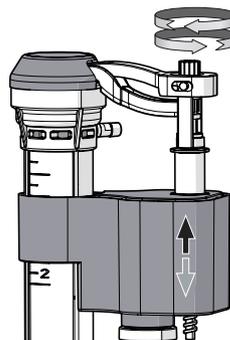

5. Adjust the screw to adjust the water level to the proper line inside the tank.