
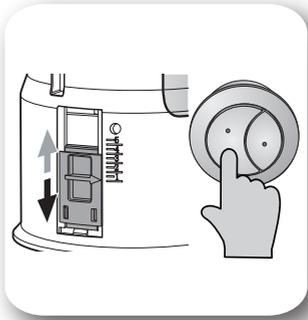
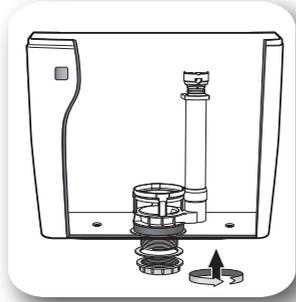
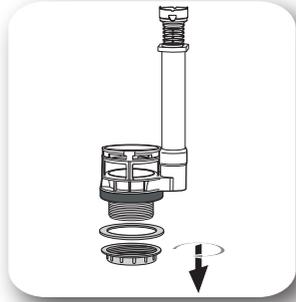


Installation Instruction Wite-Control Flush Valve Mechanism

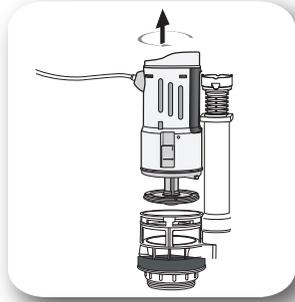

10. Press Full Flush button. Ensure bowl empties sufficiently, and siphon action is activated. If siphon action is not activated, adjust Full flush setting (red) down one notch to 4.5. Press Full Flush button again. Repeat this process until bowl empties and siphon action is activated.







1. Hold the base of the flush valve and rotate the body counter-clockwise. Take it out from base.

2. Remove the hex nut and nut collar from flush valve base. Don't remove the seal.

3. Position the flush valve's base into the water tank. Screw on the nut collar and hex nut properly.

Button installation for top ceramic hole

When installing the dual action button, make sure there are no unnecessary twists, kinks, or turns in the cable leading to the body of the flush valve. Kinks or twists in the cable could compromise performance.

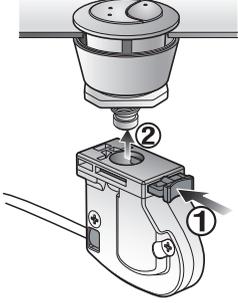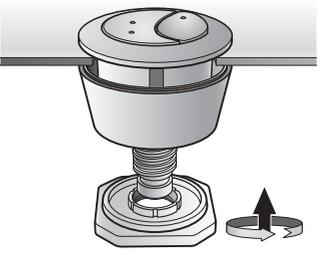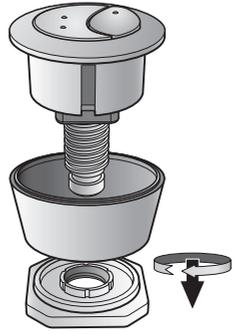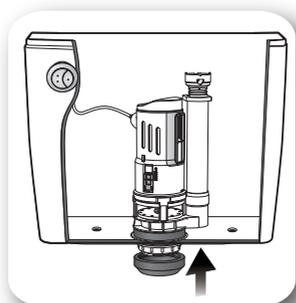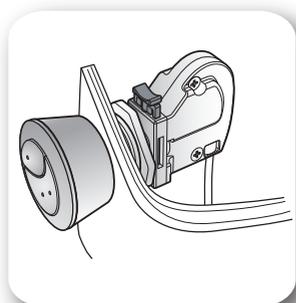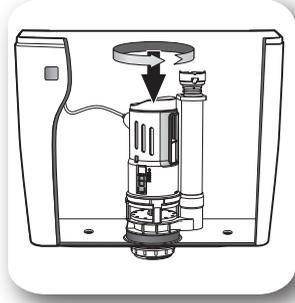

4. Take the body of flush valve and set it into the base and lock in place by rotating it clockwise.



5. Install dual flush button in the flush handle hole. See "Button installation" for side hole or top hole installation.

6. Insert the tank to bowl rubber gasket (Not included) on to the flush valve's outlet bottom.

1. Unscrew the flanged nut and sub-cover.




2. Insert the button into the oval hole of tank, then screw up sub-cover, flanged nut in sequence.

3. Push in switch box's green button(1) to connect with button body.

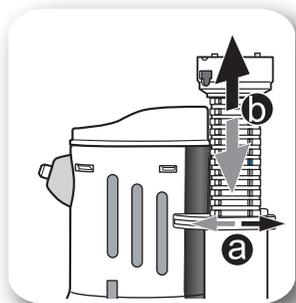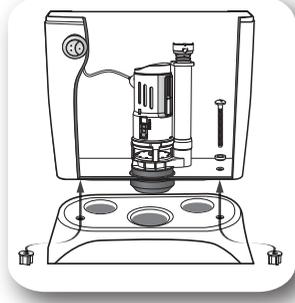

Button installation for side ceramic hole

When installing the dual action button, make sure there are no unnecessary twists, kinks, or turns in the cable leading to the body of the flush valve. Kinks or twists in the cable could compromise performance.

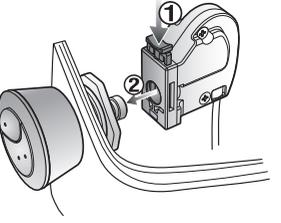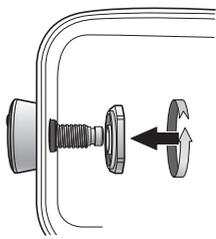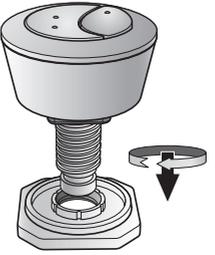

7. Position toilet tank to toilet bowl.

8. To adjust the height of the overflow pipe, slide the lock (a), then set the desired height of the overflow pipe(b). To fix the pipe with the lock part.

9. Press half Flush button. Ensure that bowl empties sufficiently, and siphon action is activated. If siphon action is not activated, adjust half flush setting (blue) down one notch to 8.5. Press half Flush button again. Repeat this process until the siphon action is activated.

1. Unscrew the flanged nut.

2. Insert the button into the oval hole of tank and then screw up the flanged nut in sequence.

3. Push in switch box's green button(1) to connect with button body.